



Fuse holder B under the steering column (holder A is on the battery with fuse holder C to the side of fuse holder A)

SA=Holder A, SB=Holder B, SC=Holder C.

SA/SC

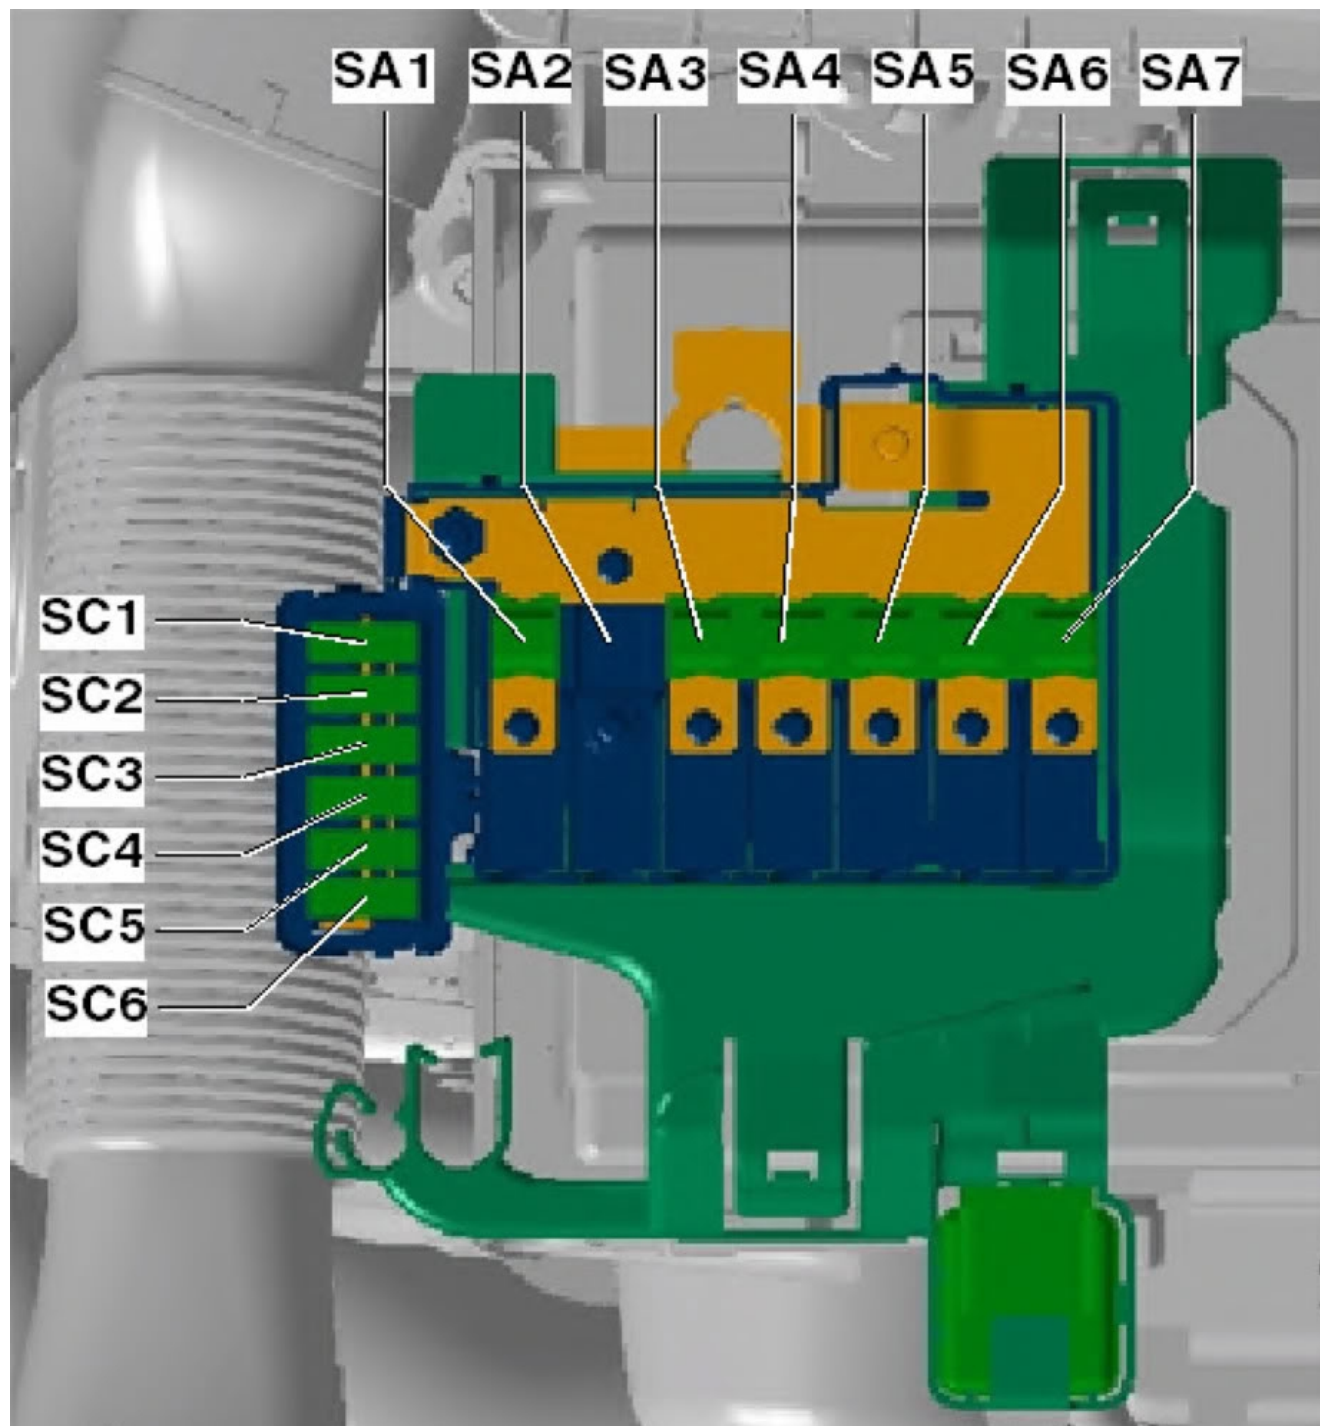

SB

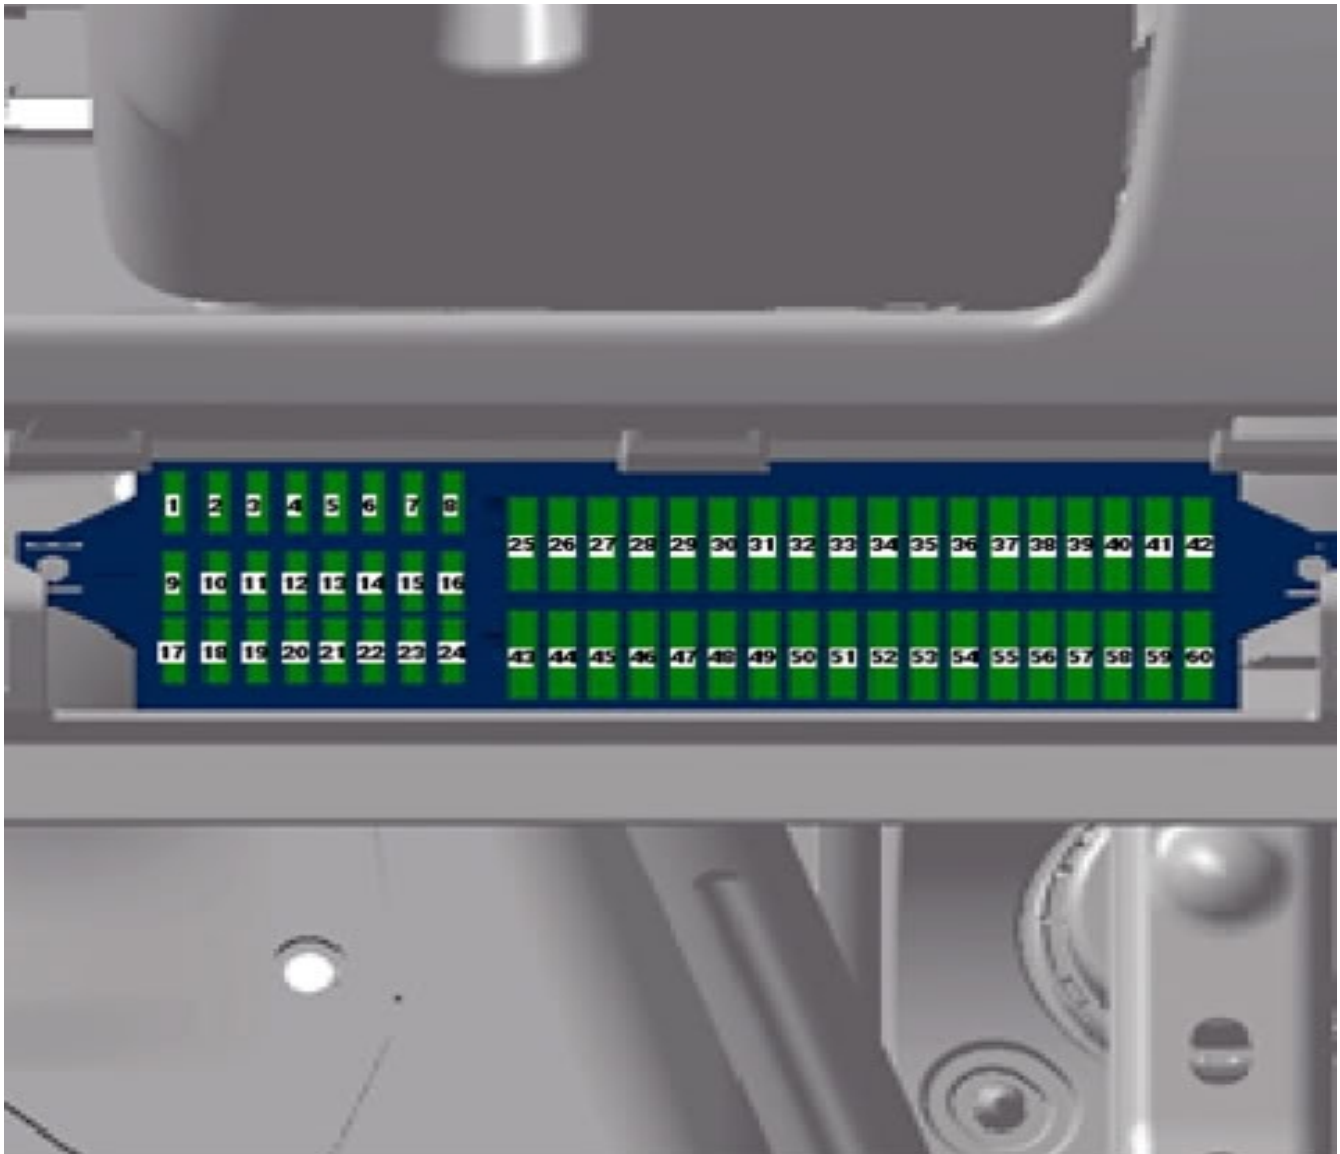

The reason the car does not come with a fuse card is that there are a huge number of fusing variations on the Polo 6R as you can see below. Fuse 47 is the wiper motor fuse.

Fuse box SA/SC

SA1 - Fuse 1 on fuse holder A 150A or 175A Note (1) - Alternator

SA2 - Fuse 2 on fuse holder A 30A Gas mode control unit (engine code CMAA only)

SA3 - Fuse 3 on fuse holder A 110A

Ignition/starter switch

Light switch

Steering column combination switch

X-contact relief relay

Motronic current supply relay

Low heat output relay

High heat output relay

Fuel supply relay

Fuse 4 -S134-

Fuse 5 -S138-

Fuse 6 -S139-

Fuse 4 on fuse holder B -SB4

Fuse 20 on fuse holder B -SB20

Fuse 35 on fuse holder B -SB35

Fuse 38 on fuse holder B -SB38

Fuse 57 on fuse holder B -SB57

SA4 - Fuse 4 on fuse holder A 50A - Power steering control unit

SA5 - Fuse 5 on fuse holder A 40A - ABS control unit

SA6 - Fuse 6 on fuse holder A 40A - Radiator fan control unit

SA7 - Fuse 7 on fuse holder A 50A - Automatic glow period control unit

SC1 - Fuse 1 on fuse holder C 25A - ABS control unit

SC2 - Fuse 2 on fuse holder C 30A - Radiator fan thermal switch, radiator fan control unit

SC3 - Fuse 3 on fuse holder C 5A - Radiator fan control unit

SC4 - Fuse 4 on fuse holder C 10A - ABS control unit

SC5 - Fuse 5 on fuse holder C 5A - On-board supply control unit

SC6 - Fuse 6 on fuse holder C 30A - Mechatronic unit for dual clutch gearbox

Note

(1) only models with stop/start system

Fuse box SB

Fuse 1, 5A

Control unit in dash panel insert

ABS control unit

Mobile telephone operating electronics control unit

Fuse 2, 10A

Steering column combination switch

On-board supply control unit

Rear window wiper motor

Windscreen and rear window washer pump

Fuse 3, 5A

Fuel pump relay

Engine control unit

Fuel supply relay

Fuel pump control unit

Control unit for structure-borne sound

Fuse 4, 2A

Steering column combination switch

Fuse 5

Not used

Fuse 6, 5A
Control unit in dash panel insert

Fuse 7, 5A
Headlight range control regulator
Number plate left light
Number plate right light
On-board supply control unit

Fuse 8, 10A
Injector, cylinder 1
Injector, cylinder 2
Injector, cylinder 3
Injector, cylinder 4
Lambda probe heater
Lambda probe 1 heater after catalytic converter
Activated charcoal filter system solenoid valve

Fuse 9, 5A
7.5A TCS and ESP button
Tyre pressure monitor display button
Steering angle sender
ABS control unit
Stop/start system button
Data bus diagnostic interface

Fuse 10 on fuse holder 5A
Cruise control system switch
Steering column combination switch
Brake light switch
Clutch pedal switch
On-board supply control unit

Fuse 11, 10A
5A, Headlight range control regulator
Left headlight range control motor
Right headlight range control motor
Cruise control system switch
On-board supply control unit
Cornering light and headlight range control unit

Fuse 12, 5A
Mirror adjustment switch

Fuse 13, 5
Mechatronic unit for dual clutch gearbox
Selector lever

Fuse 14, 5A

Airbag control unit
Front passenger side airbag deactivated warning lamp

Fuse 15, 5A
Left washer jet heater element
Right washer jet heater element

Fuse 16, 5A
Parking aid control unit

Fuse 17
Not used

Fuse 18, 5A
Rear fog light cut-out contact switch
Control unit in dash panel insert
Rear left fog light bulb
On-board supply control unit

Fuse 19, 5A
On-board supply control unit

Fuse 20, 5A
Steering angle sender
Control unit in dash panel insert
Fuel supply relay
Terminal 30 voltage supply relay
Low heat output relay
High heat output relay

Fuse 21, 10A
On-board supply control unit

Fuse 22, 5A
Diagnostic connection
Climatronic control unit
Air conditioning system control unit
Mobile telephone operating electronics control unit
Ignition key withdrawal lock solenoid

Fuse 23, 5A
Selector lever
Rain sensor
On-board supply control unit
Engine control unit
Data bus diagnostic interface

Fuse 24, 5A - On-board supply control unit
Driver side heated exterior mirror

Front passenger side heated exterior mirror

Fuse 25, 5A

High pressure sender

Heater control unit

Radiator fan control unit

Air conditioning system control unit

Trailer detector control unit

Diagnostic connection

Humidity sender

Radiator fan control unit

Voltage stabiliser

Voltage stabiliser 2

Fuse 26, 7.5A

Air mass meter

Oil level and oil temperature sender

Power steering control unit

Heater element for crankcase breather

Starter relay 1

Starter relay 2

Fuse 27, 7.5A

Reversing light switch

Fuse 28, 10A

Lambda probe

Lambda probe after catalytic converter

Lambda probe heater

Lambda probe 1 heater after catalytic converter

Fuse 29, 10A

Fuel pressure regulating valve

Fuel metering valve

Fuse 30, 10A

Charge pressure control solenoid valve

Activated charcoal filter system solenoid valve 1

Exhaust gas recirculation cooler change-over valve

Coolant circulation pump 2

Heater element relay

Fuse 31, 10A

5A Sender for fuel gauge (CMAA engine only)

Automatic glow period control unit

Fuel supply relay

Additional coolant pump relay

Injector, cylinder 1

Injector, cylinder 2

Injector, cylinder 3
Injector, cylinder 4

Fuse 32, 10A/15A/20A or 30A
Fuel gauge sender
Fuel system pressurisation pump
Engine control unit

Fuse 33, 5A
Clutch position sender
Brake light switch

Fuse 34, 15A
Control unit in dash panel insert
Left main beam bulb
Right main beam bulb On-board supply control unit
Left gas discharge light control unit
Right gas discharge light control unit

Fuse 35, 15A or 20A
Engine control unit
Fuel supply relay

Fuse 36, 7.5A
Right main beam bulb

Fuse 37, 25A
Heated driver seat regulator
Heated front passenger seat regulator
Heated front seats control unit

Fuse 38, 30A
Mechatronic unit for dual clutch gearbox

Fuse 39 10or 15A
Right dipped beam bulb

Fuse 40 30A
Fresh air blower switch
Fresh air blower control unit

Fuse 41, 10A
Rear window wiper motor

Fuse 42, 15A
Cigarette lighter
12 V socket

Fuse 43, 15A

On-board supply control unit

Fuse 44, 5A

Anti-theft alarm ultrasonic sensor

Alarm horn

Fuse 45, 15A

Control unit with display for radio and navigation system

Multimedia control unit

Radio

Voltage stabiliser

Fuse 46, 20A

Headlight washer system relay

On-board supply control unit

Fuse 47, 20A

On-board supply control unit

Windscreen wiper motor

Fuse 48, 25A

On-board supply control unit

Fuse 49, 30A

Sliding sunroof adjustment control unit

Fuse 49, 15A

Fuel pump relay

Fuel supply relay

Fuse 50, 25A

Driver door control unit

Fuse 51, 25A

Front passenger door control unit

Fuse 52, 30A

Rear left door control unit

Rear right door control unit

Fuse 53, 30A

On-board supply control unit

Fuse 54, 15A

Left fog light bulb

Right fog light bulb

Fuse 55, 15A

Ignition coil 1 with output stage

Ignition coil 2 with output stage
Ignition coil 3 with output stage
Ignition coil 4 with output stage

Fuse 56, 15A
Left day driving light bulb
Right day driving light bulb

Fuse 57, 15A
On-board supply control unit

Fuse 58, 20A
Brake servo vacuum pump

Fuse 59, 10/15A
Left dipped beam bulb

Fuse 60, 15A
Control unit with display for radio and navigation system